

# **AM1808 SOM-M1 Hardware Specification**

#### Hardware Documentation

Logic PD // Products Published: April 2010

Last revised: November 2017

This document contains valuable proprietary and confidential information and the attached file contains source code, ideas, and techniques that are owned by Logic PD, Inc. (collectively "Logic PD's Proprietary Information"). Logic PD's Proprietary Information may not be used by or disclosed to any third party except under written license from Logic PD, Inc.

Logic PD, Inc. makes no representation or warranties of any nature or kind regarding Logic PD's Proprietary Information or any products offered by Logic PD, Inc. Logic PD's Proprietary Information is disclosed herein pursuant and subject to the terms and conditions of a duly executed license or agreement to purchase or lease equipment. The only warranties made by Logic PD, Inc., if any, with respect to any products described in this document are set forth in such license or agreement. Logic PD, Inc. shall have no liability of any kind, express or implied, arising out of the use of the Information in this document, including direct, indirect, special or consequential damages.

Logic PD, Inc. may have patents, patent applications, trademarks, copyrights, trade secrets, or other intellectual property rights pertaining to Logic PD's Proprietary Information and products described in this document (collectively "Logic PD's Intellectual Property"). Except as expressly provided in any written license or agreement from Logic PD, Inc., this document and the information contained therein does not create any license to Logic PD's Intellectual Property.

The Information contained herein is subject to change without notice. Revisions may be issued regarding changes and/or additions.

© Copyright 2017, Logic PD, Inc. All Rights Reserved.

# **Revision History**

REV	EDITOR	REVISION DESCRIPTION	SCHEMATIC PN & REV	APPROVAL	DATE
1	JCA	-Initial release	1015138 Rev A 1015640 Rev A	NJK	04/20/10
2	JCA	-Added Appendix A and B containing mechanical drawings	1015138 Rev A 1015640 Rev A	JCA	09/23/10
3	JCA	-Section 2.3.1: Added Industrial temperature range; Added Caution about system temperatures when enabling SATA;	1015138 Rev A 1015640 Rev A	JCA	11/05/10
А	SMC, JCA	-Section 1.5: Updated link for Logic PD hardware design files; -Section 7.1: Updated J1.31 description since this signal is no longer connected to the PMIC; Updated J1.39, 54 descriptions to add resistor value; -Section 7.2: Updated J2.91, 97, & 99 descriptions to add resistor value; uP_EPWM0_TZ[0] is now connected to J2.99; -Section 7.3: Added resistor value to J3.54 description; uP_SPI1_SCSn0 is now connected to J3.36	1015115 Rev C 1015774 Rev B	JCA	05/04/11
В	SO	-Section 2.3.1: Added Table Note 1; -Table 3.2: Updated recommended power operating conditions for DC RTC backup battery voltage	1015115 Rev C 1015774 Rev B	SO	05/22/12
С	so	-Section 5.5.1.4: Added wording to indicate that VRTC_IN power rail must always be powered; -Appendix A: Updated mechanical drawing; -Appendix B: Updated hold-down clip drawing	1015115 Rev C 1015774 Rev B	SO	06/13/13
D	SO	-Throughout: Updated template; updated links for new support site; -Added Section 2.3.1 pointing to Appendix A for SOM mechanical drawings; -Added Section 2.3.2 pointing to Appendix B for example retention methods; -Added Section 2.3.3 regarding pick and place recommendations	1015115 Rev C 1015774 Rev B	RAH	11/18/13
Е	JMC	-Section 4.2.2: Changed SPI Flash default memory size to 16 MB	1028831 Rev A	BSB	11/30/17

Please check the <u>Logic PD support site</u><sup>1</sup> for the latest revision of this document, product change notifications, and additional documentation.

1

 $<sup>^{1}\ \</sup>underline{\text{http://support.logicpd.com/Home.aspx}}$ 

# **Table of Contents**

1		Introduction	
		1 Product Overview	1
	1.	.2 Abbreviations, Acronyms, & Definitions	
	1.	3 Nomenclature	2
	1.	.4 Scope of Document	2
	1.	.5 Additional Documentation Resources	
2		Functional Specification	
_	2.		<sub>4</sub>
		2 SOM Interface	
		3 Mechanical Specifications	
	۷.	2.3.1 AM1808 SOM-M1 Mechanical Drawings	
		2.3.2 Example AM1808 SOM-M1 Retention Methods	
	_	2.3.3 Pick and Place Recommendations	
_		4 Temperature Specifications	
3		Electrical Specification	9
4		Peripheral Specification	
		1 Clocks	
	4.	2 Memory	
		4.2.1 Mobile DDR	
		4.2.2 SPI Flash	.12
	4.	.3 10/100 Ethernet PHY	.12
	4.	.4 Display Interface	.12
	4.	.5 Serial Interfaces	.12
		4.5.1 UART0-2	.12
		4.5.2 SPIO/1	.13
		4.5.3 I2C0/1	
		4.5.4 McBSP0/1	
		4.5.5 McASP0	
		.6 USB Interface	
		.7 ADC/Touch Interface	
	4.	·	
	4.		
_		System Integration	
3		1 Custom Configuration	
	5.	2 Resets	
		5.2.1 Master Reset (MSTR_nRST)—Reset Input	
	_	5.2.2 SOM Reset (RESETOUTn)—Reset output	
		3 Interrupts	
	_	4 JTAG Debugger Interface	
	5.	5 Power Management	.16
		5.5.1 System Power Supplies	
		5.5.1.1 5V	
		5.5.1.2 USB0_VBUS	
		5.5.1.3 MAIN_BATT_IN	.17
		5.5.1.4 VRTC_IN	.17
		5.5.2 Dual Voltage I/O	.18
		5.5.3 System Power Management	.18
		5.5.4 Microprocessor	
	5.	.6 ESD Considerations	
6	-	Memory & I/O Mapping	
7		Pin Descriptions & Functions	
•		1 J1 Connector 100-Pin Descriptions	
		.2 J2 Connector 100-Pin Descriptions	
	7.		
٨		pendix A: SOM-M1 Mechanical Drawing	
		pendix B: Example SOM-M1 Retention Methods	
Н	Ηŀ	zenary pr examble 2014-14.1 Kerennon Mernoaz	30

# **Table of Figures**

Figure 2.1: AM1808 Processor Block DiagramFigure 2.2: AM1808 SOM-M1 Block Diagram	5 6
Table of Tables	
able 2.1: Mechanical Characteristics of SOM	6
able 2.2: Baseboard Mating Connectors	7
able 2.3: Temperature Characteristics of SOM	7
able 3.1: Absolute Maximum Ratings	9
Table 3.2: Recommended Power Operating Conditions	
able 4.1: Optional PLLO Output	1
able 6.1: Chip Select Signals1	9

#### 1 Introduction

#### 1.1 Product Overview

The AM1808 System on Module (SOM) is a compact, product-ready hardware and software solution that fast forwards embedded designs while reducing risk and controlling cost.

Based on Texas Instruments' AM1808 processor and designed in the SOM-M1 form factor, the AM1808 module offers essential features for handheld and embedded networking applications.

The AM1808 SOM-M1 brings the industry leading low power ARM926 core to a small, off-the-shelf solution. The standard SOM-M1 form factor allows developers to reuse existing baseboard designs when upgrading to new Sitara processors, which extends roadmap possibilities for their end-product.

Two Zoom™ Development Kit options allow developers to choose the platform best suited to their application needs. By starting with the corresponding Zoom Development Kit, engineers can write application software on the same hardware that will be used in their final product.

The compact size of the AM1808 SOM-M1 is ideal for medical patient monitoring wearables and other portable instrumentation applications; the built-in Serial ATA (SATA) controller provides fast access to large capacity storage devices. For medical, industrial, audio, and communication products, the AM1808 SOM-M1 allows for powerful versatility, long-life, and greener products.

#### 1.2 Abbreviations, Acronyms, & Definitions

ADC	Analog to Digital Converter
BOM	Bill of Materials

BSP Board Support Package

BTB Board-to-Board

DAC Digital to Analog Converter DMA Direct Memory Access

EDMA Enhanced Direct Memory Access
EMIFA External Memory Interface
ESD Electrostatic Discharge
FIFO First In First Out

HPI Host Port Interface

GPIO General Purpose Input Output GPMC General Purpose Memory Controller

Hi-Z High Impedance

I2C Inter-Integrated Circuit

I2S Inter-Integrated Circuit Sound

IC Integrated Circuit Input/Output I/O Interrupt Request IRQ Liquid Crystal Display LCD LDO Low Dropout (Regulator) McASP Multi-channel Audio Serial Port McBSP Multi-channel Buffered Serial Port mDDR Mobile Double Data Rate (RAM)

MDIO Management Data Input/Output MMU Memory Management Unit

MPU Memory Protection Unit (ARM processor core)

OTG On-the-Go (USB)
PCB Printed Circuit Board

PCMCIA Personal Computer Memory Card International Association (PC Cards)

PHY Physical Layer
PLL Phase Lock Loop
PWM Pulse Width Modulation
RTC Real Time Clock

SATA Serial ATA

SDRAM Synchronous Dynamic Random Access Memory

SOM System on Module

SOM-M1 SOM form factor type used for the AM1808 modules

SPI Standard Programming Interface
STN Super-Twisted Nematic (LCD)
TFT Thin Film Transistor (LCD)

TI Texas Instruments
TSC Touch Screen Controller

UART Universal Asynchronous Receive Transmit

uPP Universal Parallel Port
USB Universal Serial Bus
VLIW Very Long Instruction Word

VPIF Video Port Interface

#### 1.3 Nomenclature

The terms "SOM" and "SOM-M1" are used interchangeably throughout this document and can be assumed to mean the same thing within this text. The SOM-M1 is a specific form factor type of Logic PD's SOM.

#### 1.4 Scope of Document

This hardware specification is unique to the design and use of the AM1808 SOM-M1 as designed by Logic PD and does not intend to include information outside of that scope. Detailed information about the Texas Instruments (TI) AM1808 processor or any other device component on the SOM can be found in their respective manuals and specification documents; please see Section 1.5 for additional resources.

#### 1.5 Additional Documentation Resources

The following documents or documentation resources are referenced within this hardware specification.

- TI's AM1808 ARM Microprocessor Datasheet<sup>2</sup>
- TI's <u>AM1808/AM1810 ARM Microprocessor Technical Reference Manual (TRM)</u><sup>2</sup>
- TI's TPS65070 Datasheet<sup>3</sup>

<sup>&</sup>lt;sup>2</sup> http://www.ti.com/product/am1808

<sup>3</sup> http://www.ti.com/product/tps65070

- USB 2.0 Specification, 4 available from USB.org
- <u>U-Boot documentation</u><sup>5</sup>
- Logic PD AM1808 Hardware Design Files (BOM, Schematic, and Layout) for all boards included in the development kits, as well as all standard configurations SOMs. Sign into your account on <u>Logic PD's support site</u><sup>6</sup> to access the files for your specific development kit and SOM.

<sup>4</sup> http://www.usb.org/developers/docs/ 5 http://www.denx.de/wiki/U-Boot/WebHome

<sup>&</sup>lt;sup>6</sup> http://support.logicpd.com/Home.aspx

# 2 Functional Specification

#### 2.1 AM1808 Processor Highlights

The AM1808 SOM-M1 uses TI's high-performance AM1808 microprocessor. This device contains an ARM926EJ-S MPU core and provides many integrated on-chip peripherals, including:

- ARM® ARM926EJ-S™ RISC core
- Integrated LCD Controller
  - □ Up to 1024 x 1024 x 16 bit color
- Three UARTs
- I2S codec interface
- Universal Serial Bus (USB)
  - One high-speed USB 2.0 On-the-Go (OTG) interface
  - □ One full-speed USB 1.1 host interface
- Serial ATA Controller
  - □ SATA I (1.5Gb/s) or SATA II (3Gb/s)
- Many general purpose I/O (GPIO) signals
- Programmable timers
- Real time clock (RTC)
- Low power modes

**IMPORTANT NOTE:** The AM1808 processor pin out is heavily multiplexed; using one peripheral may preclude the use of another. Users should carefully review the processor pinout, SOM pinout, and AM1808 multiplexing table. See TI's *AM1808 ARM Microprocessor Datasheet* for additional information.

**IMPORTANT NOTE:** Please visit TI's AM1808 product page<sup>7</sup> for errata on the AM1808.

\_

<sup>&</sup>lt;sup>7</sup> http://www.ti.com/product/am1808

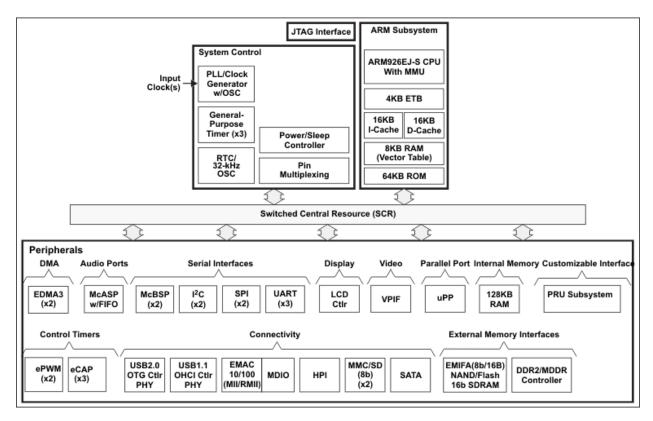


Figure 2.1: AM1808 Processor Block Diagram

**NOTE:** The block diagram pictured above comes from TI's *AM1808 ARM Microprocessor Datasheet*.

#### 2.2 SOM Interface

Logic PD's common SOM interface allows for easy migration to new processors and technology. Logic PD is constantly researching and developing new technologies to improve performance, lower cost, and increase feature capabilities. By using the common SOM footprint, it is possible to take advantage of Logic PD's work without having to re-spin the old design in certain cases, dependent upon peripheral usage.

In fact, encapsulating a significant amount of your design onto the SOM reduces any long-term risk of obsolescence. If a component on the SOM design becomes obsolete, Logic PD will simply design for an alternative part that is transparent to your product. Furthermore, Logic PD tests all SOMs prior to delivery, decreasing time-to-market and ensuring a simpler and less costly manufacturing process. Contact Logic PD<sup>8</sup> for more information.

<sup>8</sup> http://support.logicpd.com/TechnicalSupport/AskAQuestion.aspx

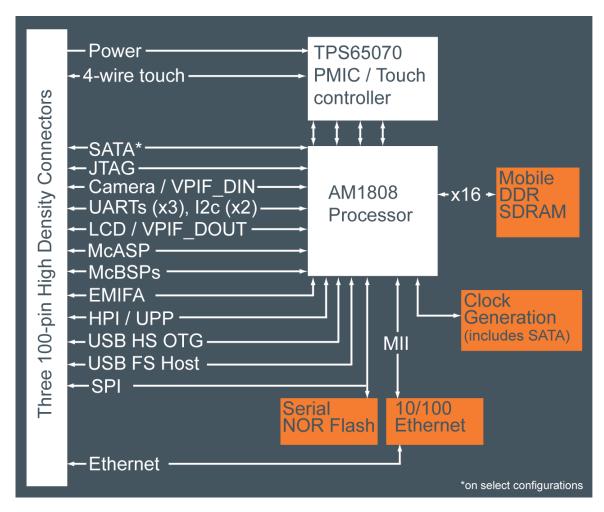


Figure 2.2: AM1808 SOM-M1 Block Diagram

#### 2.3 Mechanical Specifications

Table 2.1: Mechanical Characteristics of SOM

Parameter	Min	Typical	Max	Unit	Notes
Dimensions	_	30 x 40 x 4.1	_	mm	1
Weight	_	7	_	Grams	2
Connector Insertion/Removal	_	30	_	Cycles	_

#### **TABLE NOTES:**

- 1. The AM1808 SOM-M1 in the Zoom AM1808 EVM Development Kit includes power measurement circuitry along one edge of the SOM. This additional circuitry increases the PCB size to  $33.7 \times 40 \times 4.1$  mm. All other AM1808 SOM-M1 modules, including those available in production volumes, are the typical size listed above.
- 2. May vary depending on SOM configuration.

The AM1808 SOM-M1 connects to a PCB baseboard through three, 100-pin board-to-board (BTB) socket connectors.

Table 2.2: Baseboard Mating Connectors

Ref Designator	Manufacturer	SOM Connector P/N	Mating Connector P/N
J1, J2, J3	Hirose	DF40C-100DP-0.4V(51)	DF40C-100DS-0.4V(51)

#### 2.3.1 AM1808 SOM-M1 Mechanical Drawings

Please see Appendix A for mechanical drawings of the AM1808 SOM-M1 and recommended baseboard footprint layout.

#### 2.3.2 Example AM1808 SOM-M1 Retention Methods

Please see Appendix B for mechanical drawings demonstrating three possible retention methods for the AM1808 SOM-M1. These drawings are only meant to serve as possible solutions and should not be considered final designs for retention.

#### 2.3.3 Pick and Place Recommendations

The connectors for the AM1808 SOM-M1 can be difficult for standard pick and place machines. Logic PD has the following recommendations for ensuring straight connectors during assembly:

- Modify the size of the pick and place nozzle. The correct size for the DS connector is .99 mm.
- Place the nozzle during pick on the indentation in the connector made for the nozzle.
- Slow the horizontal velocity when moving and the rotation speed when making turns.
   Excessive speeds can cause the connector to slip on the nozzle, placing the connector out of alignment.

#### 2.4 Temperature Specifications

Table 2.3: Temperature Characteristics of SOM

Parameter	Min	Typical	Max	Unit	Notes
Commercial Operating Temperature	0	25	70	°C	_
Industrial Operating Temperature	-40	25	85	°C	1
Storage Temperature	-40	25	85	°C	_

#### **TABLE NOTES:**

1. Junction temperature of the AM1808 processor must stay below 90°C to obtain 100,000 power-on hours. Consult the AM1808 ARM Microprocessor Datasheet for more information regarding the recommended operating conditions.

**CAUTION:** Systems using the SATA interface on the AM1808 SOM-M1 may require additional heat dissipation techniques in order to comply with the high end of the system temperature limitation. It is the responsibility of the engineer to ensure the AM1808 SOM-M1 maintains a safe operating temperature within the system.

## 3 Electrical Specification

Table 3.1: Absolute Maximum Ratings

Parameter	Symbol	Rating	Unit
DC 5 V Supply Voltage	5V	0.0 to 7.0	٧
DC Main Battery Input Voltage	MAIN_BATT_IN	0.0 to 7.0	٧
RTC Backup Battery Voltage	BACKUP_BATT	0.0 to 7.0	V

**NOTE:** These stress ratings are only for transient conditions. Operation at, or beyond, absolute maximum rating conditions may affect reliability and cause permanent damage to the SOM and its components.

Table 3.2: Recommended Power Operating Conditions

Parameter	Min	Typical	Max	Unit	Notes
DC Main Battery Input Voltage	3.3	3.6	4.2	V	4
DC 5V Voltage	3.6	5.0	5.8	V	3
DC 5V Active Current	_	250	_	mA	5
DC 5V Active Current, no SATA	_	151	_	mA	6
DC RTC Backup Battery Voltage	2.7	_	5.5	V	
	0.65*VREF (1.8V)				
Input Signal High Voltage	2 (3.3V)	_	VREF	V	2
			0.35*VREF (1.8V)		
Input Signal Low Voltage	GND	_	0.8 (3.3V)	V	2
	2.40 (3.3V)				
Output Signal High Voltage	VREF-0.45 (1.8V)	_	VREF	V	2
			0.40 (3.3V)		
Output Signal Low Voltage	GND	_	0.45 (1.8V)	V	2

#### **TABLE NOTES:**

- 1. General note: CPU power rails are sequenced on the module.
- 2. VREF represents the peripheral I/O supply reference for the specific CPU voltage rail. For  $V_{\text{I/OH}}$  and  $V_{\text{I/OL}}$ , different values are provided for VREF = 1.8V and 3.3V.
- 3. Please see Section 5.5.1.1 for detailed information about 5V usage on the AM1808 SOM-M1.
- 4. Please see Section 5.5.1.3 for detailed information about MAIN\_BATT\_IN usage on the AM1808 SOM-M1.
- 5. Measurement was taken with a system consisting of SOM and baseboard. The SOM was running the standard U-Boot software image, version 2009.11. This power measurement represents current consumption on the SOM only (baseboard and UI board were excluded).

6.	Same setup as Note by populating R146.	5 with t	he exception	that the S	ATA clock o	jenerator v	was disabled

## 4 Peripheral Specification

#### 4.1 Clocks

The AM1808 SOM-M1 contains two crystals. One crystal is used to generate clocks for the processor core(s) and peripherals. The second crystal is dedicated to the RTC module.

The AM1808 processor includes on-chip Phase Locked Loops (PLLs) and signal dividers which generate all core/peripheral clocks from a single external 24.000 MHz crystal. The maximum core processor operating frequency is 450 MHz. Optionally, on-chip module PLL0 provides an output:

Table 4.1: Optional PLL0 Output

SOM Pin#	SOM Net Name	AM1808 Processor Pin
J3.18	uP_OBSCLK	CLKOUT/ UHPI_HDS2/ GP6[14]

**IMPORTANT NOTE:** Please see TI's AM1808 ARM Microprocessor Datasheet and user guides for additional information about processor clocking.

The AM1808 processor also contains an on-chip real time clock (RTC) module that is driven by an external 32.768 kHz crystal. The highly configurable RTC module provides a time reference to applications running on the AM1808. The SOM contains a dedicated power input pin (J2.64, "VRTC\_IN") and low dropout (LDO) that supplies the processor's dedicated RTC power rail (RTC\_CVDD).

**IMPORTANT NOTE:** For more information on RTC power, see Section 5.5.1.4. For more information about software configuration of the RTC, see TI's AM1808 ARM Microprocessor Datasheet and AM1808/AM1810 ARM Microprocessor TRM.

#### 4.2 Memory

#### 4.2.1 Mobile DDR

The AM1808 SOM-M1 provides volatile memory via a single mDDR chip. Please refer to the AM1808 SOM-M1 Bill of Materials (BOM) for the memory density of your specific SOM.

Other memory densities may be available for SOMs in production volumes. Please contact Logic PD about custom configurations if your design requires different memory densities from Logic PD's standard SOM configurations.

#### 4.2.2 SPI Flash

The AM1808 SOM-M1 provides non-volatile memory via a 16 MB SPI flash chip. This is also the default boot device.

Other memory densities may be available for SOMs in production volumes. Please contact Logic PD about custom configurations if your design requires different memory densities from Logic PD's standard SOM configurations.

#### 4.3 10/100 Ethernet PHY

The AM1808 SOM-M1 uses an SMSC LAN8710 Ethernet PHY to provide an easy-to-use networking interface. The four analog PHY interface signals (transmit/receive) each require an external impedance matching circuit to operate properly. Logic PD provides an example circuit schematic in the *AM1808 Baseboard Schematics*. Please note the TX+/- and RX+/- pairs must be routed as differential pairs on the baseboard PCB.

#### 4.4 Display Interface

The AM1808 has a built-in LCD controller supporting both synchronous (raster-type) and asynchronous (memory-mapped) panels.

The synchronous (raster) module supports STN, color STN, and TFT panels at a resolution of up to  $1024 \times 1024 \times 16$ -bit color.

The asynchronous (memory-mapped) module supports a broad range of displays from monochrome character displays to TFT smart LCD panels. Displays driven by this module must contain their own memory and timing circuitry.

The signals from the AM1808 LCD controller can be interfaced through the expansion connectors. See TI's AM1808 ARM Microprocessor Datasheet for further information on the integrated LCD controller.

**IMPORTANT NOTE:** Using the internal graphics controller will affect processor performance. Selecting display resolutions and color bits per pixel will vary processor busload.

#### 4.5 Serial Interfaces

The AM1808 SOM-M1 comes with the following serial channels: UARTO-2, SPIO/1, I2CO/1, McBSPO/1, and McASP. If additional serial channels are required, please contact Logic PD for reference designs. Please see TI's AM1808/AM1810 ARM Microprocessor TRM for further information regarding serial communications.

#### 4.5.1 UART0-2

The AM1808 SOM-M1 provides three UART ports. UART0, UART1, and UART2 are asynchronous 16C550-compatible UARTs. These UARTs are high-speed serial interfaces that use 16-byte TX and RX FIFO registers; they are capable of sending and receiving serial data

simultaneously. The signals from the SOM are not RS232 level signals. The end-product design must provide an external transceiver for RS232 applications. Logic PD has provided an example reference design with the Zoom AM1808 Development Kits. When choosing an RS232 transceiver, the designer should keep in mind cost, availability, ESD protection, and data rates.

UART2 has been configured as the main SOM serial port. The UART2 baud rate is set to a default 115.2 Kbits/sec, though it supports most common serial baud rates.

#### 4.5.2 SPIO/1

The AM1808 SOM-M1 provides two SPI ports with multiple chip selects.

SPI1 is the default boot source for the AM1808 SOM-M1. A serial flash chip is attached to SPI1 CSO.

#### 4.5.3 I2CO/1

The AM1808 SOM-M1 provides two I2C ports. The clock and data signals for both ports have 4.7K pull-up resistors to their respective power rails on the SOM. Please see TI's AM1808/AM1810 ARM Microprocessor TRM for further information.

I2C0 has been configured as the main SOM I2C port. I2C0 is used to control/configure many ICs on the SOM as well as the Zoom AM1808 Development Kits.

#### 4.5.4 McBSP0/1

The AM1808 SOM-M1 supports two Multi-channel Buffered Serial Port (McBSP) interfaces. These interfaces are primarily designed to support AC97 and IIS modes, but they can also be configured for other serial formats. However, the McBSPs are not intended to be used as high-speed interfaces.

#### 4.5.5 McASP0

The AM1808 SOM-M1 supports one Multi-channel Audio Serial Port (McASP). The McASP interface supports TDM streams, I2S protocols, and DIT.

Logic PD has provided an example reference design with the Zoom AM1808 Development Kits; this reference design interfaces the AM1808 McASP to a TLV320AIC3106 audio codec.

#### 4.6 USB Interface

The AM1808 SOM-M1 supports one USB 1.1 full-speed host port and one USB 2.0 OTG port, which can function as a host or device/client. The USB 2.0 port can operate at up to 480 Mbit/sec, and the USB 1.1 port can operate at up to 12 Mbit/sec. Both the USB 1.1 and USB 2.0 controllers are internal to the AM1808 processor. For more information on using both the USB host and OTG interfaces, please see TI's AM1808/AM1810 ARM Microprocessor TRM.

**IMPORTANT NOTE:** In order to correctly implement USB on the SOM, additional impedance matching circuitry may be required on the USBx\_D+ and USBx\_D- signals before they can be used. USB 2.0 requirements specify the signals must be routed as differential pairs with a 90 ohm differential impedance. Refer to the *USB 2.0 Specification* for detailed information.

## 4.7 ADC/Touch Interface

The touch screen controller (TSC) on the AM1808 SOM-M1 is an integrated feature of the TPS65070 PMIC. This TSC is used to support standard 4-wire resistive touch panels. The TPS65070 is connected to the AM1808 by the I2C0 interface. Please see TI's *TPS65070 Datasheet* for more information.

#### 4.8 General Purpose I/O (GPIO)

Logic PD designed the AM1808 SOM-M1 to be flexible and provide multiple options for analog and digital general purpose input/output (GPIO). There are numerous digital GPIO pins on the SOM that interface to the AM1808. See Section 7 of this document for more information. If certain peripherals are not desired, such as the LCD controller, chip selects, IRQs, or UARTs, then more GPIO pins become available.

### 4.9 Expansion/Feature Options

The AM1808 SOM-M1 was designed for expansion and a variable feature set, providing all the necessary control signals and bus signals to expand the user's design. Some of these signals are buffered before reaching the expansion connectors. See TI's AM1808 ARM Microprocessor Datasheet, TI's AM1808/AM1810 ARM Microprocessor TRM, and Logic PD's AM1808 SOM-M1 Schematics for more details. Logic PD has experience implementing additional options, including: audio codecs, Ethernet ICs, co-processors, and components on SOMs. Please contact Logic PD for potential reference designs before selecting your peripherals.

## 5 System Integration

#### **5.1 Custom Configuration**

The AM1808 SOM-M1 was designed to meet multiple applications for users with specific design and budget requirements. As a result, this SOM supports a variety of embedded operating systems, flexible mDDR and SPI flash memory footprints, and other hardware configurations. If your application needs require unique hardware or software configurations, please <a href="contact-Logic PD">contact-Logic PD</a> about custom SOMs available in production volumes.

#### 5.2 Resets

The AM1808 SOM-M1 has a reset input (MSTR\_nRST) and a reset output (RESETOUTn). External devices use MSTR\_nRST to assert reset to the product. The AM1808 SOM-M1 uses RESETOUTn to indicate to other devices that the SOM is in reset.

#### 5.2.1 Master Reset (MSTR\_nRST)—Reset Input

Logic PD suggests that custom designs implementing the AM1808 SOM-M1 use the MSTR\_nRST signal as the "pin-hole" reset used in commercial embedded systems. The MSTR\_nRST triggers a power-on-reset event to the AM1808 processor and resets the entire CPU.

**IMPORTANT NOTE:** Any custom reset circuit design should guard the assertion of the reset lines during a low power state so as to prevent power-up in a low or bad power condition. (Powering up in a low or bad power condition will cause data corruption and, possibly, temporary system lockup). See Section 5.5 of this document for further details. A low pulse on the MSTR\_nRST signal will cause a system-wide reset.

#### Low Pulse on MSTR nRST Signal:

A low pulse on the MSTR\_nRST signal, asserted by an external source (for example, the reset button on the custom design application) will bring MSTR\_nRST low until the assertion source is de-asserted. There is no delay beyond the de-assertion of the external MSTR\_nRST signal source, so the custom design must ensure that the assertion time is sufficient for all related peripherals.

Logic PD suggests that de-bouncing be used to generate a clean, one-shot reset signal for any external assertion source that triggers the MSTR\_nRST signal, analog or digital.

#### 5.2.2 SOM Reset (RESETOUTn)—Reset output

All hardware peripherals should connect their hardware-reset pin to the RESETOUTn signal on the expansion connector. Internally, all AM1808 SOM-M1 peripheral hardware reset pins are connected to the RESET\_nOUT net.

If the output of the onboard voltage-monitoring circuit is asserted (active low), the user can expect to lose information stored in RAM. The data loss occurs because the CPU is reset to its reset defaults.

#### 5.3 Interrupts

The AM1808 interrupt controller allows the ARM core to enable, disable, trigger, or service all interrupts. Most external GPIO signals can also be configured as interrupt inputs by configuring their pin control registers. Logic PD BSPs set up and process all onboard system and external SOM interrupt sources. Refer to TI's AM1808 ARM Microprocessor Datasheet and AM1808/AM1810 ARM Microprocessor TRM for further information on using interrupts.

#### **5.4 JTAG Debugger Interface**

The JTAG connection on the AM1808 allows recovery of corrupted flash memory, real-time application debug, and ARM core development. There are several third-party JTAG debuggers available for TI microprocessors. The following signals make up the JTAG interface to the AM1808 processor: TDI, TMS, TCK, TDO, nTRST, RTCK, EMU0, EMU1, and MSTR\_nRST (MSTR\_nRST is only required for some JTAG tools; see the JTAG tool documentation for exact pinout). These signals should interface directly to a 14 or 20-pin 0.1" through-hole connector, as shown on Logic PD's AM1808 Baseboard Schematic.

**IMPORTANT NOTE:** When laying out the JTAG connector, realize that it may not be numbered as a standard 14 or 20-pin 0.1" insulation displacement connector (IDC) throughhole connector. See the *AM1808 Baseboard Schematic* for further details. Each JTAG tool vendor may define the IDC connector pin-out differently.

#### 5.5 Power Management

#### 5.5.1 System Power Supplies

In order to ensure a flexible design, the AM1808 SOM-M1 has the following power areas: MAIN\_BATT\_IN, 5V, RTC\_BATT. All power areas are inputs to the SOM. The module also provides output reference voltage 3.3V\_or\_1.8V. 3.3V\_or\_1.8V is an output from the SOM, and should only be used as a reference voltage input to level shifting devices on baseboard designs.

**IMPORTANT NOTE:** If USB0\_VBUS is powered externally it will power the SOM, even if MAIN\_BATT\_IN and 5V are disconnected. Additionally, USB0\_VBUS can charge MAIN\_BATT\_IN. Please refer to TI's *TPS65070 Datasheet* for more information.

#### 5.5.1.1 5V

The 5V input is the main source of power for the AM1808 SOM-M1. If power is present at the 5V input, the TPS65070 PMIC will preferentially select this power source over all other sources. If appropriate voltage is applied to the 5V input, the TPS65070 PMIC and AM1808 processor will immediately start up and run. 5V input is capable of charging MAIN\_BATT\_IN.

- For startup, acceptable 5V input range is: 3.6V < 5V input < 5.8V
- At runtime, 5V range is: UVLO < 5V input < 5.8V</p>
- UVLO = UnderVoltage LockOut
- UVLO = 3.0V (default), 2.8V < UVLO < 3.25V (programmable)

#### 5.5.1.2 USB0\_VBUS

USB0\_VBUS is an optional power source for the AM1808 SOM-M1. If power is present at the USB0\_VBUS input, the TPS65070 PMIC will preferentially select this source over MAIN\_BATT\_IN. If appropriate voltage is applied to the USB0\_VBUS input, the TPS65070 PMIC and AM1808 processor will immediately start up and run. The USB0\_VBUS input is capable of charging MAIN\_BATT\_IN.

#### 5.5.1.3 MAIN\_BATT\_IN

The MAIN\_BATT\_IN input is designed to be connected to a typical single lithium-ion battery. The TPS65070 PMIC will only power the SOM from MAIN\_BATT\_IN if power is not present at 5V or USB0\_VBUS inputs. If appropriate voltage is applied to the MAIN\_BATT\_IN input, the TPS65070 PMIC and AM1808 processor will NOT immediately start up and run; a momentary low signal is also required on the PMIC\_PB\_IN pin. The TPS65070 PMIC is capable of charging MAIN\_BATT\_IN from either the 5V input or the USB0\_VBUS input.

- For startup, MAIN\_BATT\_IN range is: 3.6V < MAIN\_BATT\_IN < 4.2V
- At runtime, MAIN\_BATT\_IN range is: UVLO < MAIN\_BATT\_IN < 4.2V</p>
- UVLO = UnderVoltage LockOut
- UVLO = 3.0V (default), 2.8V < UVLO < 3.25V (programmable)</li>

**IMPORTANT NOTE:** Though UVLO may be set as low as 2.8V, not all AM1808 SOM-M1 circuits are capable of 2.8V operation. The SOM contains an internal 3.3V power rail, and devices connected to this rail may have dropout voltages much greater than UVLO. See Table 3.2 for the recommended range of input voltages.

**IMPORTANT NOTE:** Before designing a system which powers the AM1808 SOM-M1 from MAIN\_BATT\_IN, the user should first review the *TPS65070 Datasheet*, *AM1808 SOM-M1 Schematic*, and *AM1808 Baseboard Schematic*.

#### 5.5.1.4 VRTC\_IN

The VRTC\_IN power rail is used to power the onboard RTC module. This rail must always be powered, even if no RTC is required. A lithium-ion coin cell typically supplies power to this rail.

#### 5.5.2 Dual Voltage I/O

The AM1808 processor and AM1808 SOM-M1 uniquely support dual-voltage I/O. The user may select an operating voltage of either 1.8V or 3.3V through "IO\_VOLTAGE\_SEL" J1.37. For 3.3V operation, J1.37 should be left unconnected. For 1.8V operation, J1.37 should be tied directly to GND.

#### **5.5.3** System Power Management

Good power management design is important in any system development and embedded system design is no exception. In embedded system design, power management is typically one of the most complicated areas due to the dramatic effect it has on product cost, performance, usability, and overall customer satisfaction. Many factors affect a power-efficient hardware design: power supply selection (efficiency), clocking design, IC and component selection, etc. The AM1808 SOM-M1 was designed with these aspects in mind while also providing maximum flexibility in software and system integration.

On the AM1808, there are many different software configurations that drastically affect power consumption: microprocessor core clock frequency, bus clock frequency, peripheral clocks, bus modes, power management states; peripheral power states and modes; product user scenarios; interrupt handling; and display settings (resolution, backlight, refresh, bits per pixel, etc). These settings are typically initialized in the startup software routines and may be modified later in the operating system and application software. Information on these items can be found in the appropriate documents such as the *U-Boot User Guide*; TI's AM1808 ARM Microprocessor Datasheet, AM1808/AM1810 ARM Microprocessor TRM, and TPS65070 Datasheet; and Logic PD's AM1808 SOM-M1 Schematic.

#### 5.5.4 Microprocessor

The AM1808 processor's power management scheme was designed for ultra-low power, so naturally the static and dynamic power consumption has very flexible controls allowing designers to configure the processor to minimize end-product power consumption. Most peripheral modules can be powered on/off individually, and the core(s) can enter various levels of standby/sleep. To implement a low-power system, users should review TI's AM1808 ARM Microprocessor Datasheet, AM1808/AM1810 ARM Microprocessor TRM, and TPS65070 Datasheet, as well as Logic PD's AM1808 SOM-M1 Schematic.

#### 5.6 ESD Considerations

The AM1808 SOM-M1 was designed to interface to a customer's peripheral board, while remaining low cost and adaptable to many different applications. The SOM does not provide any onboard ESD protection circuitry—this must be provided by the product it is used in. Logic PD has extensive experience in designing products with ESD requirements. Please contact Logic PD if you need any assistance in ESD design considerations.

# 6 Memory & I/O Mapping

AM1808 chip select signals are described in Table 6.1 below.

Table 6.1: Chip Select Signals

Chip Select	Device/Feature	Notes
SPI0_SCS[0:5]	Not Available	MDIO/MII comm. interfaces on SOM
SPI1_SCS[0]	SPI Flash (boot)	LCD Backlight PWM on development kit
SPI1_SCS[1]		LCD Backlight Power on development kit
SPI1_SCS[2:3]		Available for use by an off-board external device
SPI1_SCS[4]		UART TXD on development kit
SPI1_SCS[5]		UART RXD on development kit
SPI1_SCS[6]	Not Available	I2C0 is used extensively for configuration/control on both the SOM and development kit
SPI1_SCS[7]	Not Available	I2C0 is used extensively for configuration/control on both the SOM and development kit
EMA_CS[0]		Available for use by an off-board external device
EMA_CS[2:5]		Available for use by an off-board external device
UHPI_HCS		Available for use by an off-board external device

# **7** Pin Descriptions & Functions

- **SOM Net Name:** This is the name used in Logic PD's *AM1808 SOM-M1 Schematics*.
- **Processor Name:** This is the name used TI's AM1808 ARM Microprocessor Datasheet.
- **I/O:** This indicates the default pin configuration after booting U-Boot. Most pins can be reconfigured as either input or output. Consult Logic PD's *AM1808 SOM-M1 Schematics* and TI's *AM1808 ARM Microprocessor Datasheet* for more information.
- **Description:** If a pull-up or pull-down resistor is present on the AM1808 SOM-M1, it will be noted here. Special usage tips and cautions will be noted here. See Logic PD's AM1808 SOM-M1 Schematics and TI's AM1808 ARM Microprocessor Datasheet for more information.

#### **7.1** J1 Connector 100-Pin Descriptions

J1 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J1.1	uP_VPIF_DOUT8	VP_DOUT[8]/ LCD_D[8]/ UPP_XD[0]/ GP7[0]/ BOOT[0]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD G3 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-down on SOM. Used to latch boot mode at startup (see Note 2).
J1.2	uP_VPIF_DOUT0	VP_DOUT[0]/ LCD_D[0]/ UPP_XD[8]/ GP7[8]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD B1 data bit when outputting RGB565 data to an RGB666 display.
J1.3	uP_VPIF_DOUT9	VP_DOUT[9]/ LCD_D[9]/ UPP_XD[1]/ GP7[1]/ BOOT[1]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_G4 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-down on SOM. Used to latch boot mode at startup (see Note 2).
J1.4	uP_VPIF_DOUT1	VP_DOUT[1]/ LCD_D[1]/ UPP_XD[9]/ GP7[9]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_B2 data bit when outputting RGB565 data to an RGB666 display.
J1.5	uP_VPIF_DOUT10	VP_DOUT[10]/ LCD_D[10]/ UPP_XD[2]/ GP7[2]/ BOOT[2]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_G5 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-up on SOM. Used to latch boot mode at startup (see Note 2).
J1.6	uP_VPIF_DOUT2	VP_DOUT[2]/ LCD_D[2]/ UPP_XD[10]/ GP7[10]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_B3 data bit when outputting RGB565 data to an RGB666 display.
J1.7	uP_VPIF_DOUT11	VP_DOUT[11]/ LCD_D[11]/ UPP_XD[3]/ GP7[3]/ BOOT[3]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_R1 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-up on SOM. Used to latch boot mode at startup (see Note 2).
J1.8	uP_VPIF_DOUT3	VP_DOUT[3]/ LCD_D[3]/ UPP_XD[11]/ GP7[11]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_B4 data bit when outputting RGB565 data to an RGB666 display.

J1 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J1.9	uP_VPIF_DOUT12	VP_DOUT[12]/ LCD_D[12]/ UPP_XD[4]/ GP7[4]/ BOOT[4]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_R2 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-down on SOM. Used to latch boot mode at startup (see Note 2).
J1.10	uP_VPIF_DOUT4	VP_DOUT[4]/ LCD_D[4]/ UPP_XD[12]/ GP7[12]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_B5 data bit when outputting RGB565 data to an RGB666 display. Notice that LCD_B0 is omitted; LCD_B5 (Blue MSB) is also connected to LCD_B0 (Blue LSB) when driving an 18 bit display with 16 bits.
J1.11	uP_VPIF_DOUT13	VP_DOUT[13]/ LCD_D[13]/ UPP_XD[5]/ GP7[5]/ BOOT[5]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_R3 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-down on SOM. Used to latch boot mode at startup (see Note 2).
J1.12	uP_VPIF_DOUT5	VP_DOUT[5]/ LCD_D[5]/ UPP_XD[13]/ GP7[13]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_G0 data bit when outputting RGB565 data to an RGB666 display.
J1.13	uP_VPIF_DOUT14	VP_DOUT[14]/ LCD_D[14]/ UPP_XD[6]/ GP7[6]/ BOOT[6]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_R4 data bit when outputting RGB565 data to an RGB666 display. 4.7k pull-down on SOM. Used to latch boot mode at startup (see Note 2).
J1.14	uP_VPIF_DOUT6	VP_DOUT[6]/ LCD_D[6]/ UPP_XD[14]/ GP7[14]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_G1 data bit when outputting RGB565 data to an RGB666 display.
J1.15	uP_VPIF_DOUT15	VP_DOUT[15]/ LCD_D[15]/ UPP_XD[7]/ GP7[7]/ BOOT[7]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_R5 data bit when outputting RGB565 data to an RGB666 display. Notice that LCD_R0 is omitted; LCD_R5 (Red MSB) is also connected to LCD_R0 (Red LSB) when driving an 18 bit display with 16 bits.  4.7k pull-down on SOM. Used to latch boot mode at startup (see Note 2).
J1.16	uP_VPIF_DOUT7	VP_DOUT[7]/ LCD_D[7]/ UPP_XD[15]/ GP7[15]	Hi-Z	3.3V or 1.8V (see Note 1)	LCD_G2 data bit when outputting RGB565 data to an RGB666 display.
J1.17	uP_LCD_HSYNC	MMCSD1_DAT[5]/ LCD_HSYNC/ GP8[9]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.18	uP_LCD_PCLK	MMCSD1_DAT[7]/ LCD_PCLK/ GP8[11]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J1.19	DGND	_	I	GND	Ground. Connect to digital ground.
J1.20	DGND	_	I	GND	Ground. Connect to digital ground.
J1.21	uP_LCD_VSYNC	MMCSD1_DAT[4]/ LCD_VSYNC/ GP8[8]	Hi-Z	3.3V or 1.8V (see Note 1)	_

J1 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
		MMCSD1_DAT[6]/			
J1.22	uP LCD MCLK	LCD_MCLK/ GP8[10]	Hi-7	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
31122	uP_LCD_AC_ENB_	LCD_AC_ENB_CS/		3.3V or 1.8V	22 omin series it on serii
J1.23	CSn	GP6[0]	Hi-Z		_
J1.24	uP_VPIF_CLKIN0	VP_CLKINO/ UHPI_HCS/ GP6[7]/ UPP_2xTXCLK	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.25	uP_USB0_DRVVBU S	USB0_DRVVBUS	0	_	_
J1.26	uP_VPIF_DIN14	VP_DIN[14]_ HSYNC/ UHPI_HD[6]/ UPP_CHA_D[6]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.27	uP_VPIF_CLKO3	VP_CLKOUT3/ GP6[1]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J1.28	uP_VPIF_DIN15	VP_DIN[15]_ VSYNC/ UHPI_HD[7]/ UPP_CHA_D[7]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.29	uP_RESETn	RESET	I	3.3V or 1.8V (see Note 4)	4.7k pull-up on SOM. Also connected to PGOOD on TPS65070 PMIC. PGOOD is an open drain output.
J1.30	RFU	_	NA	NA	Reserved for future use. Do not connect.
J1.31	uP_NMIn	RSVDN	I	3.3V or 1.8V (see Note 1)	Reserved. 4.7k pull-up on SOM.
J1.32	uP_VPIF_DIN13	VP_DIN[13]_ FIELD/ UHPI_HD[5]/ UPP_CHA_D[5]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.33	PMIC_PB_IN	_	I/O	_	Input to TPS65070 PMIC, not AM1808. See Section 5.5.1.3. Buffered version of this input can be read on AM1808 pin EMA_RAS / GPIO2[5]
J1.34	uP_VPIF_DIN12	VP_DIN[12]/ UHPI_HD[4]/ UPP_CHA_D[4]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.35	RFU	_	NA	NA	Reserved for future use. Do not connect.
J1.36	uP_VPIF_DIN11	VP_DIN[11]/ UHPI_HD[3]/ UPP_CHA_D[3]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.37	IO_VOLTAGE_SEL	_	I/O		Input to TPS65070 PMIC, not AM1808. See Section 5.5.2
J1.38	uP_VPIF_DIN10	VP_DIN[10]/ UHPI_HD[2]/ UPP_CHA_D[2]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.39	uP_EPWM0_TZ[0]	AXR15/ EPWM0TZ[0]/ ECAP2_APWM2/ GP0[7]	Hi-Z	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM. Note: This signal is also connected to J2.99.

J1 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J1.40	uP_VPIF_DIN9	VP_DIN[9]/UHPI_H D[1]/UPP_CHA_D[1 ]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.41	uP_EPWM1_TZ[0]	AXR7/ EPWM1TZ[0]/ GP1[15]	Hi-Z	3.3V or 1.8V	Note: This signal is also connected to J3.6
J1.42	uP_VPIF_DIN8	VP_DIN[8]/UHPI_H D[0]/UPP_CHA_D[0 ]/GP6[5]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.43	SATA_RXP	SATA_RXP	I	_	_
J1.44	uP_SPI0_SCSn4	SPI0_SCS[4]/ UART0_TXD/ GP8[3]/ MII_RXD[2]	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 4.7k pull-down on SOM.
J1.45	SATA_RXN	SATA_RXN	I	_	_
J1.46	uP_SPI0_SCSn3	SPI0_SCS[3] UART0_CTS / / GP8[2]/ MII_RXD[1]/ SATA_MP_SWITCH	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 4.7k pull-up on SOM.
J1.47	DGND	_	I	GND	Ground. Connect to digital ground.
J1.48	uP_SPI0_SCSn2	SPI0_SCS[2]/ UART0_RTS/ GP8[1]/ MII_RXD[0]/ SATA_CP_DET	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 4.7k pull-up on SOM.
J1.49	RFU	_	NA	NA	Reserved for future use. Do not connect.
J1.50	uP_SPI0_SCSn5	SPI0_SCS[5]/ UART0_RXD/ GP8[4]/ MII_RXD[3]	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 4.7k pull-down on SOM.
J1.51	RFU	_	NA	NA	Reserved for future use. Do not connect.
J1.52	uP_UART2_RTSn	AMUTE/ UART2_RTS/ GP0[9]	0	3.3V or 1.8V (see Note 1)	_
J1.53	DGND	_	I	GND	Ground. Connect to digital ground.
J1.54	uP_UART2_CTSn	RSVD/ RTC_ALARM/ UART2_CTS/ GP0[8]/ DEEPSLEEP	I	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J1.55	SATA_TXN	SATA_TXN	0	_	_
J1.56	uP_EMIFA_A15	EMA_A[15]/ MMCSD0_DAT[6]/ GP5[15]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.57	SATA_TXP	SATA_TXP	0		_
J1.58	uP_EMIFA_A14	EMA_A[14]/ MMCSD0_DAT[7]/ GP5[14]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.59	uP_EMIFA_A21	EMA_A[21]/ MMCSD0_DAT[0]/ GP4[5]	Hi-Z	3.3V or 1.8V (see Note 1)	_

J1 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
14.60	D LIDD CHO CLK	MMCSD1_DAT[0]/ UPP_CHB_CLK/	7	3.3V or 1.8V	22 1 2 604
J1.60	uP_UPP_CH0_CLK	GP8[15] EMA_A[20]/ MMCSD0_DAT[1]/	Hi-Z	(see Note 1) 3.3V or 1.8V	22 ohm series R on SOM.
J1.61	uP_EMIFA_A20	VP_CLKIN3/ MMCSD1_DAT[1]/	Hi-Z	(see Note 1) 3.3V or 1.8V	_
J1.62	uP_VPIF_CLKIN3	GP6[2] EMA_A[19]/	Hi-Z	,	_
J1.63	uP_EMIFA_A19	MMCSD0_DAT[2]/ GP4[3]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.64	uP_VPIF_CLKO2	VP_CLKOUT2/ MMCSD1_DAT2/ GP6[3]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J1.65	3.3V_or_1.8V	_	0	3.3V or 1.8V (see Note 1)	I/O Voltage Output from SOM. Do not use this as a general purpose power source. Use this pin to power level shifters etc.
J1.66	uP_VPIF_CLKIN2	VP_CLKIN2/ MMCSD1_DAT[3]/ GP6[4]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.67	3.3V_or_1.8V	_	0	3.3V or 1.8V (see Note 1)	I/O Voltage Output from SOM. Do not use this as a general purpose power source. Use this pin to power level shifters etc.
J1.68	TOUCH_X1	_	I/O	_	Input to TPS65070 PMIC, not AM1808. Touch Right (X+) Processor reads via I2C
J1.69	uP EMIFA A18	EMA_A[18]/ MMCSD0_DAT[3]/ GP4[2]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.70	TOUCH_X2	_	I/O	_	Input to TPS65070 PMIC, not AM1808. Touch Left (X-) Processor reads via I2C
J1.71	uP_EMIFA_A17	EMA_A[17]/ MMCSD0_DAT[4]/ GP4[1]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.72	TOUCH_Y1	_	I/O	_	Input to TPS65070 PMIC, not AM1808. Touch Up (Y+) Processor reads via I2C
J1.73	uP_EMIFA_A16	EMA_A[16]/ MMCSD0_DAT[5]/ GP4[0]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.74	TOUCH_Y2	_	I/O	_	Input to TPS65070 PMIC, not AM1808. Touch Down (Y-) Processor reads via I2C
J1.75	uP_EMIFA_A22	EMA_A[22]/ MMCSD0_CMD/ GP4[6]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.76	uP_UPP_CH0_ENA BLE	MMCSD1_CMD/ UPP_CHB_ENABLE/ GP8[13]	Hi-Z	3.3V or 1.8V (see Note 1)	_

J1 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J1.77	uP_EMIFA_A23	EMA_A[23]/ MMCSD0_CLK/ GP4[7]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.78	uP_UPP_CH0_STA RT	MMCSD1_CLK/ UPP_CHB_START/ GP8[14]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J1.79	DGND	_	I	GND	Ground. Connect to digital ground.
J1.80	DGND	_	I	GND	Ground. Connect to digital ground.
J1.81	uP_USB1_DM	USB1_DM	I/O	(see Note 3)	24.9 ohm series R on SOM. 15k pull-down on SOM.
J1.82	uP_USB0_DM	USB0_DM	I/O	(see Note 3)	_
J1.83	uP_USB1_DP	USB1_DP	I/O	(see Note 3)	24.9 ohm series R on SOM. 15k pull-down on SOM.
J1.84	uP_USB0_DP	USB0_DP	I/O	(see Note 3)	_
J1.85	RFU	_	NA	NA	Reserved for future use. Do not connect.
J1.86	uP_USB0_ID	USB0_ID	I	+5V or GND	_
J1.87	USB_VBUS	USB0_VBUS	I	+5V or GND	Also connects to TPS65070 PMIC. (see Note 4)
J1.88	USB_VBUS	USB0_VBUS	I	+5V or GND	_
J1.89	uP_UART1_CTSn	AHCLKX/ USB_REFCLKIN/ UART1_CTS/ GP0[10]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM
J1.90	5V_IN	_	I	5V	_
J1.91	uP_UART1_RTSn	AHCLKR/ UART1_RTS/ GP0[11]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM
J1.92	5V_IN	_	I	5V	_
J1.93	uP_SPI1_SCSn2	SPI1_SCS[2]/ UART1_TXD/ SATA_CP_POD/ GP1[0]	0	3.3V or 1.8V (see Note 1)	_
J1.94	DGND	_	I	GND	Ground. Connect to digital ground.
J1.95	uP_SPI1_SCSn3	SPI1_SCS[3]/ UART1_RXD/ SATA_LED/ GP1[1]	0	3.3V or 1.8V (see Note 1)	_
J1.96	5V_IN	_	I	5V	_
J1.97	uP_SPI1_SCSn4	SPI1_SCS[4]/ UART2_TXD/ I2C1_SDA/ GP1[2]	0	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J1.98	5V_IN	_	I	5V	_
J1.99	uP_SPI1_SCSn5	SPI1_SCS[5]/ UART2_RXD/ I2C1_SCL/ GP1[3]	I	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J1.100	DGND	_	I	GND	Ground. Connect to digital ground.

#### **TABLE NOTES:**

- 1. Most AM1808 SOM-M1 I/O pins are dual-voltage capable; that is, the SOM I/O pins may be configured to operate at 3.3V or 1.8V. The desired I/O voltage is set via J1.37. See Section 5.5.2 for more information.
- 2. At startup, the boot mode is determined by sampling BOOT[0:7] (i.e., LCD\_D[8:15]). Resistors on the SOM pull these pins to a default value. User boards may select alternate boot modes by pulling selected pins opposite their default value; to do this, the user's board must use resistors of much lower impedance than those used on the SOM. User boards must ensure that other circuits do not drive or load down these pins at startup. Driving/loading these pins at startup may cause the processor to latch an incorrect boot mode. For compatibility with the SOM-M1 form factor, BOOT[1:4] (LCD\_D[9,10,11,12] or J1.3,5,7,9) are connected to BOOTBIT[1:4] (J3.2,4,12,14) through zero ohm resistors.
- 3. USB voltage levels follow the USB specification and depend on the USB operating speed. Please see the *USB 2.0 Specification* for more information.
- 4. USBO\_VBUS can be used to power the SOM. Please see the *TPS65070 Datasheet* for more information.

#### **7.2 J2** Connector **100-Pin** Descriptions

J2 Pin#	SOM Net Name	Processor Name	1/0	Voltage	Description
J2.1	uP_EMIFA_D7	EMA_D[7]/ GP4[15]	,	3.3V or 1.8V	_
J2.2	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.3	uP_EMIFA_D8	EMA_D[8]/ GP3[0]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.4	uP_EMIFA_WAIT1	EMA_WAIT[1]/ GP2[1]	Hi-Z	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM
J2.5	uP_EMIFA_D9	EMA_D[9]/ GP3[1]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.6	uP_EMIFA_WAIT0	EMA_WAIT[0]/ GP3[8]	Hi-Z	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM
J2.7	uP_EMIFA_D10	EMA_D[10]/ GP3[2]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.8	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.9	uP_EMIFA_D11	EMA_D[11]/ GP3[3]	Hi-Z	3.3V or 1.8V (see Note 1)	
J2.10	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.11	uP_EMIFA_D12	EMA_D[12]/ GP3[4]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.12	uP_EMIFA_WEn	EMA_WE/ GP3[11]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.13	uP_EMIFA_D13	EMA_D[13]/ GP3[5]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.14	uP_EMIFA_OEn	EMA_OE/ GP3[10]	Hi-Z	3.3V or 1.8V (see Note 1)	_

J2 Pin#	SOM Net Name	Processor Name	1/0	Voltage	Description
FIII#	30M Net Maine	Processor Name	1/0	_	Description
J2.15	uP_EMIFA_D14	EMA_D[14]/ GP3[6]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.16	uP_EMIFA_RnW	EMA_A_RW / GP3[9]	Hi-Z	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J2.17	uP_EMIFA_D15	EMA_D[15]/ GP3[7]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.18	uP_EMIFA_CLK	EMA_CLK/ GP2[7]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.19	DGND	_	I	GND	Ground. Connect to digital ground.
J2.20	DGND	_	I	GND	Ground. Connect to digital ground.
J2.21	uP_EMIFA_A0	EMA_A[0]/ GP5[0]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.22	uP_EMIFA_CSn5	EMA_CS[5]/ GP3[12]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.23	uP_EMIFA_A1	EMA_A[1]/ GP5[1]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.24	uP_EMIFA_CSn4	EMA_CS[4]/ GP3[13]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.25	uP_EMIFA_A2	EMA_A[2]/ GP5[2]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.26	uP_EMIFA_CSn3	EMA_CS[3]/ GP3[14]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.27	uP_EMIFA_A3	EMA_A[3]/ GP5[3]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.28	uP_EMIFA_CSn2	EMA_CS[2]/ GP3[15]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.29	uP_EMIFA_A4	EMA_A[4]/ GP5[4]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.30	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.31	uP_EMIFA_A5	EMA_A[5]/ GP5[5]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.32	uP_EMIFA_CSn0	EMA_CS[0]/ GP2[0]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.33	uP_EMIFA_A6	EMA_A[6]/ GP5[6]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.34	uP_EMIFA_D0	EMA_D[0]/ GP4[8]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.35	uP_EMIFA_A7	EMA_A7/ GP5[7]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.36	uP_EMIFA_D1	EMA_D[1]/ GP4[9]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.37	uP_EMIFA_A8	EMA_A[8]/ GP5[8]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.38	uP_EMIFA_D2	EMA_D[2]/ GP4[10]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.38	UP_EMITA_DZ	LMA_D[2]/ GP4[10]	пі-Д	(see Note 1)	<u> </u>

J2		_			
Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J2.39	uP_EMIFA_A9	EMA_A[9]/ GP5[9]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.40	uP_EMIFA_D3	EMA_D[3]/ GP4[11]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.41	uP_EMIFA_A10	EMA_A[10]/ GP5[10]	Hi-Z	3.3V or 1.8V (see Note 1)	
J2.42	uP_EMIFA_D4	EMA_D[4]/ GP4[12]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.43	uP_EMIFA_A11	EMA_A[11]/ GP5[11]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.44	uP_EMIFA_D5	EMA_D[5]/ GP4[13]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.45	uP_EMIFA_A12	EMA_A[12]/ GP5[12]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.46	uP_EMIFA_D6	EMA_D[6]/ GP4[14]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.47	DGND	_	I	GND	Ground. Connect to digital ground.
J2.48	DGND	_	I	GND	Ground. Connect to digital ground.
J2.49	MAIN_BATT_IN	_	I/O	_	Designed for a standard lithium battery. See Section 5.5.1.3
J2.50	MAIN_BATT_IN	_	I/O	_	Designed for a standard lithium battery. See Section 5.5.1.3
J2.51	MAIN_BATT_IN	_	I/O	_	Designed for a standard lithium battery. See Section 5.5.1.3
J2.52	MAIN_BATT_IN	_	I/O	_	Designed for a standard lithium battery. See Section 5.5.1.3
J2.53	DGND	_	I	GND	Ground. Connect to digital ground.
J2.54	DGND	_	I	GND	Ground. Connect to digital ground.
J2.55	uP_EMIFA_A13	EMA_A[13]/ GP5[13]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.56	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.57	ETHER_LINK_ACT_ LEDn	_	0	_	Connect to cathode of Ethernet Act. LED 4.7k pull-up on SOM.
J2.58	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.59	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.60	uP_SPI1_SCSn6	SPI1_SCS[6]/ I2C0_SDA/ TM64P3_OUT12/ GP1[4]	I/O	3.3V or 1.8V (see Note 1)	I2C0 bus is used for communication between the AM1808 processor and the TPS65070 PMIC. 4.7k pull-up on SOM.
J2.61	RFU			NA	Reserved for future use. Do not connect.
J2.62	uP_SPI1_SCSn7	SPI1_SCS[7]/ I2C0_SCL/ TM64P2_OUT12/ GP1[15]	0	3.3V or 1.8V (see Note 1)	I2C0 bus is used for communication between the AM1808 processor and the TPS65070 PMIC. 4.7k pull-up on SOM.
J2.63	ETHER_SPEED_LE D	_	0	_	Connect cathode of Ethernet Speed LED
	•	•			

J2 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J2.64	VRTC_IN	_	I	_	_
J2.65	3.3V_or_1.8V	_	0	3.3V or 1.8V (see Note 1)	_
J2.66	uP_MCBSP0_CLKR	AXR6/ CLKR0/ GP1[14]/ MII_TXEN	0	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 22 ohm series R on SOM.
J2.67	3.3V_or_1.8V	_	0	3.3V or 1.8V (see Note 1)	_
J2.68	uP_MCBSP0_CLKS	AXRO/ ECAPO_APWMO/ GP8[7]/ MII_TXD[0]/ CLKS0	0	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 22 ohm series R on SOM.
J2.69	uP_SPI1_ENAn	SPI1_ENA/ GP2[12]	0	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J2.70	uP_MCBSP0_FSX	AXR3/ FSX0/ GP1[11]/ MII_TXD[3]	0	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM.
J2.71	ETHER_TX+	_	0	_	49.9 ohm pull-up on SOM.
J2.72	uP_MCBSP0_DR	AXR2/ DR0/ GP2[10]/ MII_TXD[2]	0	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM.
J2.73	ETHER_TX-	_	0	_	49.9 ohm pull-up on SOM.
J2.74	uP_MCBSP0_DX	AXR1/ DX0/ GP1[19]/ MII_TXD[1]	0	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM.
J2.75	ETHER_RX+	_	I	_	49.9 ohm pull-up on SOM.
J2.76	uP_MCBSP0_FSR	AXR4/ FSR0/ GP1[12]/ MII_COL	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 4.7k pull-up on SOM.
J2.77	ETHER_RX-	_	I	_	49.9 ohm pull-up on SOM.
J2.78	uP_MCBSP0_CLKX	AXR5/ CLKX0/ GP1[13]/ MII_TXCLK	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 22 ohm series R on SOM.
J2.79	DGND	_	I	GND	Ground. Connect to digital ground.
J2.80	DGND	_	I	GND	Ground. Connect to digital ground.
J2.81	uP_SPI0_CLK	SPIO_CLK/ EPWM0A/ GP1[8]/ MII_RXCLK/	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 22 ohm series R on SOM. 4.7k pull-down on SOM.
J2.82	uP_MCBSP1_CLKX	AXR13/ CLKX1/ GP0[5]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J2.83	uP_SPI0_SOMI	SPIO_SOMI/ EPWMSYNCI/ GP8[6]/ MII_RXER	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM. 4.7k pull-down on SOM.

J2 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J2.84	uP_MCBSP1_FSX	AXR11/ FSX1/ GP0[3]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.85	uP_SPI0_SIMO	SPIO_SIMO/ EPWMSYNCO/ GP8[5]/ MII_CRS	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM.
J2.86	uP_MCBSP1_DX	AXR9/ DX1/ GP0[1]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.87	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.88	uP_MCBSP1_DR	AXR10/ DR1/ GP0[2]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.89	RFU	_	NA	NA	Reserved for future use. Do not connect.
J2.90	uP_MCBSP1_CLKR	AXR14/ CLKR1/ GP0[6]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J2.91	uP_EMIFA_BA0	EMA_BA[0]/ GP2[8]	Hi-Z	3.3V or 1.8V (see Note 1)	1k pull-down on SOM.
J2.92	uP_MCBSP1_CLKS	AXR8/ CLKS1/ ECAP1_APWM1/ GP0[0]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J2.93	uP_EMIFA_BA1	EMA_BA[1]/ GP2[9]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.94	uP_MCBSP1_FSR	AXR12/ FSR1/ GP0[4]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J2.95	uP_SPI0_ENAn	SPIO_ENA/ EPWMOB/ MII_RXDV	I	3.3V or 1.8V (see Note 1)	MII bus is used to communicate between the AM1808 processor and LAN8710 Ethernet PHY on the SOM.
J2.96	uP_SPI1_CLK	SPI1_CLK/ GP2[13]	0	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM. 4.7k pull-up on SOM.
J2.97	uP_SPI1_SCSn1	SPI1_SCS[1]/ EPWM1A/ GP2[15]/ TM64P2_IN12	0	3.3V or 1.8V (see Note 1)	1k pull-down on SOM.
J2.98	uP_SPI1_SOMI	SPI1_SOMI/ GP2[11]	I	3.3V or 1.8V (see Note 1)	_
J2.99	uP_EPWM0_TZ[0]	AXR15/ EPWM0TZ[0]/ ECAP2_APWM2/ GP0[7]	Hi-Z	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM. Note: This signal is also connected to J1.39.
J2.100	uP_SPI1_SIMO	SPI1_SIMO/ GP2[10]	0	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.

#### **TABLE NOTES:**

1. Most AM1808 SOM-M1 I/O pins are dual-voltage capable; that is, the SOM I/O pins may be configured to operate at 3.3V or 1.8V. The desired I/O voltage is set via J1.37. See Section 5.5.2 for more information.

# 7.3 J3 Connector 100-Pin Descriptions

J3 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J3.1	RFU	_	NA NA	NA	Reserved for future use. Do not connect.
J3.2	воотвіт2	_	NA	3.3V or 1.8V (see Note 1)	Do not connect. Connected to J1.5 via zero ohm res. on SOM.
J3.3	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.4	воотвіт4	_	NA	3.3V or 1.8V (see Note 1)	Do not connect. Connected to J1.9 via zero ohm res. on SOM.
J3.5	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.6	uP_EPWM1_TZ[0]	AXR7/ EPWM1TZ[0]/ GP1[15]	Hi-Z	3.3V or 1.8V (see Note 1)	Note: This signal is also connected to J1.41.
J3.7	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.8	RFU (PM_I2C_SCL)	_	NA	_	Do not connect.
J3.9	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.10	RFU (PM_I2C_SDA)	_	NA	_	Do not connect.
J3.11	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.12	воотвіт1	_	NA	3.3V or 1.8V (see Note 1)	Do not connect. Connected to J1.3 via zero ohm res. on SOM.
J3.13	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.14	воотвітз	_	NA	3.3V or 1.8V (see Note 1)	Do not connect. Connected to J1.7 via zero ohm res. on SOM.
J3.15	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.16	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.17	BATT_TS	_	I/O	_	Sense line for thermal resistor in battery pack.
J3.18	uP_OBSCLK	CLKOUT/ UHPI_HDS2/ GP6[14]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J3.19	DGND	_	I	GND	Ground. Connect to digital ground.
J3.20	DGND	_	I	GND	Ground. Connect to digital ground.
J3.21	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.22	RFU	_	NA	NA	Reserved for future use. Do not connect.

J3 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J3.23	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.24	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.25	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.26	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.27	uP_SPI0_SCSn0	SPI0_SCS[0]/ TM64P1_OUT12/ GP1[6]/ MDIO_D/ TM64P1_IN12	I/O	3.3V or 1.8V (see Note 1)	MDIO bus is used to communicate between AM1808 and LAN8710 Ethernet PHY on SOM.
J3.28	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.29	uP_SPI0_SCSn1	SPI0_SCS[1]/ TM64P0_OUT12/ GP1[7]/ MDIO_CLK/ TM64P0_IN12	0	3.3V or 1.8V (see Note 1)	MDIO bus is used to communicate between AM1808 and LAN8710 Ethernet PHY on SOM.
J3.30	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.31	uP_VPIF_DIN7	VP_DIN[7]/ UHPI_HD[15]/ UPP_CHA_D[15]/ RMII_TXD[1]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.32	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.33	uP_VPIF_DIN5	VP_DIN[5]/ UHPI_HD[13]/ UPP_CHA_D[13]/ RMII_TXEN	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.34	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.35	uP_VPIF_DIN6	VP_DIN[6]/UHPI_H D[14]/UPP_CHA_D [14]/RMII_TXD[0]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.36	uP_SPI1_SCSn0	SPI1_SCS[0]/ EPWM1B/ GP2[14]/ TM64P3_IN12	0	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J3.37	uP_VPIF_DIN2	VP_DIN[2]/ UHPI_HD[10]/ UPP_CHA_D[10]/ RMII_RXER	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.38	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.39	uP_VPIF_DIN0	VP_DIN[0]/ UHPI_HD[8]/ UPP_CHA_D[8]/ RMII_CRS_DV	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.40	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.41	uP_VPIF_DIN4	VP_DIN[4]/	Hi-Z	3.3V or 1.8V	_

J3 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
		UHPI_HD[12]/ UPP_CHA_D[12]/ RMII_RXD[1]		(see Note 1)	
J3.42	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.43	uP_VPIF_DIN3	VP_DIN[3]/ UHPI_HD[11]/ UPP_CHA_D[11]/ RMII_RXD[0]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.44	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.45	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.46	uP_UPP_CH1_STA RT	UHPI_HCNTL1/ UPP_CHA_START/ GP6[10]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.47	USB1_PWR_EN	EMA_CAS/ GP2[4]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.48	uP_VPIF_CLKIN1	VP_CLKIN1/ UHPI_HDS1/ GP6[6]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.49	uP_VPIF_DIN1	VP_DIN[1]/ UHPI_HD[9]/ UPP_CHA_D[9]/ RMII_MHZ_50_CLK	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.50	uP_UPP_CH1_CLK	UHPI_HCNTL0/ UPP_CHA_CLK/ GP6[11]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J3.51	DGND	_	I	GND	Ground. Connect to digital ground.
J3.52	uP_UPP_CH1_EN ABLE	UHPI_HHWIL/UPP_ CHA_ENABLE/GP6[ 9]	Hi-Z	3.3V or 1.8V (see Note 1)	
J3.53	uP_McASP_CLKX	ACLKX/ GP0[14]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J3.54	uP_RESETOUTn	RESETOUT/ UHPI_HAS/ GP6[15]	Hi-Z	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM.
J3.55	uP_McASP_CLKR	ACLKR/ GP0[15]	Hi-Z	3.3V or 1.8V (see Note 1)	22 ohm series R on SOM.
J3.56	uP_UPP_CH1_WA IT	UHPI_HRW/ UPP_CH1_WAIT/ GP6[8]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.57	uP_McASP_FSX	AFX/ GP0[12]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.58	uP_UHPI_HRDY	UHPI_HRDY/GP6[1 3]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.59	uP_McASP_FSR	AFSR/ GP0[13]	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.60	uP_UHPI_HINTn	UHPI_HINT/GP6[12 ]	Hi-Z	3.3V or 1.8V (see Note 1)	_


J3 Pin#	SOM Net Name	Processor Name	I/O	Voltage	Description
J3.61	BUFF_OEn	EMA_SDCKE/ GP2[6]	Hi-Z	3.3V or 1.8V (see Note 1)	1k pull-down on SOM.
J3.62	uP_UPP_CH0_WA IT	UPP_CHB_WAIT/ GP8[12]/	Hi-Z	3.3V or 1.8V (see Note 1)	_
J3.63	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.64	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.65	3.3V_or_1.8V	_	0	3.3V or 1.8V (see Note 1)	_
J3.66	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.67	3.3V_or_1.8V	_	0	3.3V or 1.8V (see Note 1)	_
J3.68	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.69	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.70	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.71	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.72	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.73	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.74	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.75	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.76	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.77	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.78	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.79	DGND	_	I	GND	Ground. Connect to digital ground.
J3.80	DGND	_	I	GND	Ground. Connect to digital ground.
J3.81	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.82	uP_TCK	TCK	I	3.3V or 1.8V (see Note 1)	_
J3.83	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.84	uP_RTCK	RTCK/ GP8[0]	0	3.3V or 1.8V (see Note 1)	_
J3.85	RFU	_	NA	NA	Reserved for future use. Do not connect.


J3 Pin#	SOM Net Name	Processor Name	1/0	Voltage	Description
J3.86	uP_EMU1	EMU1	0	3.3V or 1.8V	4.7k pull-up on SOM
J3.87	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.88	uP_EMU0	EMU0	0	3.3V or 1.8V (see Note 1)	4.7k pull-up on SOM
J3.89	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.90	uP_TDO	TDO	0	3.3V or 1.8V (see Note 1)	_
J3.91	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.92	uP_TDI	TDI	I	3.3V or 1.8V (see Note 1)	_
J3.93	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.94	uP_TMS	TMS	I	3.3V or 1.8V (see Note 1)	_
J3.95	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.96	uP_TRSTn	TRST	I	3.3V or 1.8V (see Note 1)	_
J3.97	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.98	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.99	RFU	_	NA	NA	Reserved for future use. Do not connect.
J3.100	RFU		NA	NA	Reserved for future use. Do not connect.


#### **TABLE NOTES:**

1. Most AM1808 SOM-M1 I/O pins are dual-voltage capable; that is, the SOM I/O pins may be configured to operate at 3.3V or 1.8V. The desired I/O voltage is set via J1.37. See Section 5.5.2 for more information.

# **Appendix A: SOM-M1 Mechanical Drawing**

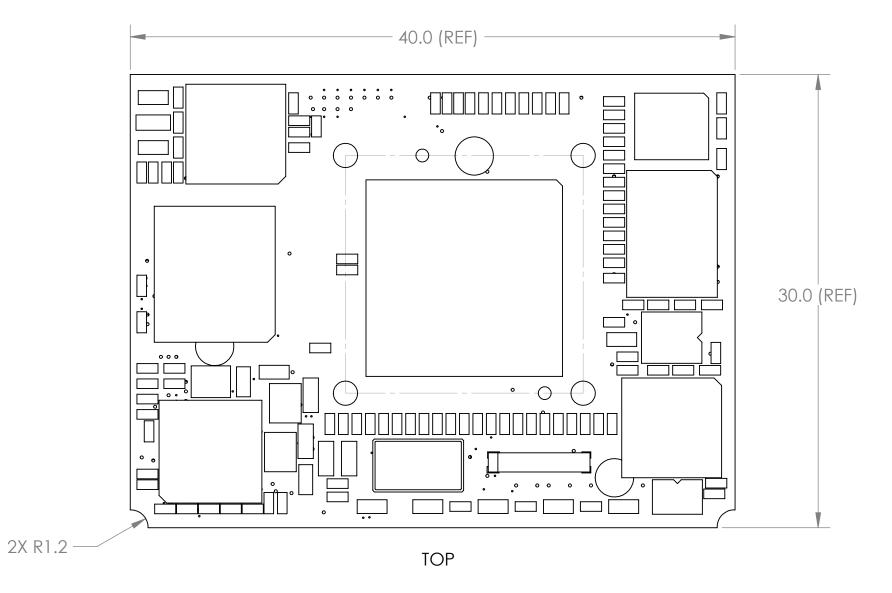



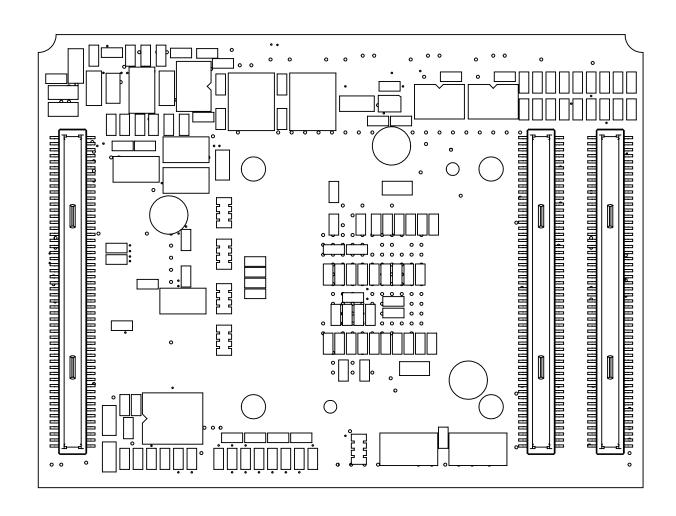

BOTTOM

5

4

6

7

REVISIONS					
REV.	REV. ECO NUMBER DESCRIPTION				
Α	A - INITIAL ENGINEERING RELEASE				
В	C06955	UPDATED CONNECTOR LABELS	10.23.09		
С	C029865	ADDED PIN LOCATIONS	08.17.10		
D	C036467	UPDATED NOTE 3 TO INCLUDE: PLEASE NOTE THAT THEY ARE NOT SEQUENTIAL, BUT ARE AS FOLLOWS: J1, J3, J2. ALSO ADDED NOTE TO DENOTE THIS ON SHEET 2.	05.13.13		

NOTES:

1

3

DO NOT PLACE ANY COMPONENTS WITHIN LAYOUT AREA OF SOM



BASEBOARD CONNECTOR SPECIFICATION: HIROSE DF40C-100DS-0.4V




MACHINE PLACEMENT OF J1,J2, AND J3 IS HIGHLY RECOMMENDED. PLEASE NOTE THAT THEY ARE NOT SEQUENTIAL, BUT ARE AS FOLLOWS: J1, J3, J2



ALL ALIGNED COMPONENTS TO BE WITHIN ±.075


5.

DO NOT SCALE DRAWING



THIS DRAWING PREPARED
IN ACCORDANCE WITH
ASME Y14.5-2000
ALL DIMENSIONS
ARE IN MILLIMETERS
UNLESS OTHERWISE
SPECIFIED
TOLERANCES UNLESS
OTHERWISE SPECIFIED
X ± 0.5
X.X ± 0.2
X.XX ± 0.1
X° ± 1°

ENG MHC CHECK KAG	10.23.09 DATE 10.23.09 DATE	Logic	<u>SIZE</u>	SOM-M1	D REV
PMH	10.23.09	411 N. Washington Ave. Suite 400 Minneapolis, MN 55401	<u>SCALE</u>	1013825	<u>SHEET</u>
MANE	DATE	T:612.672.9495 F:612.672.9489 I:www.logicpd.com	4:1		1 OF 2

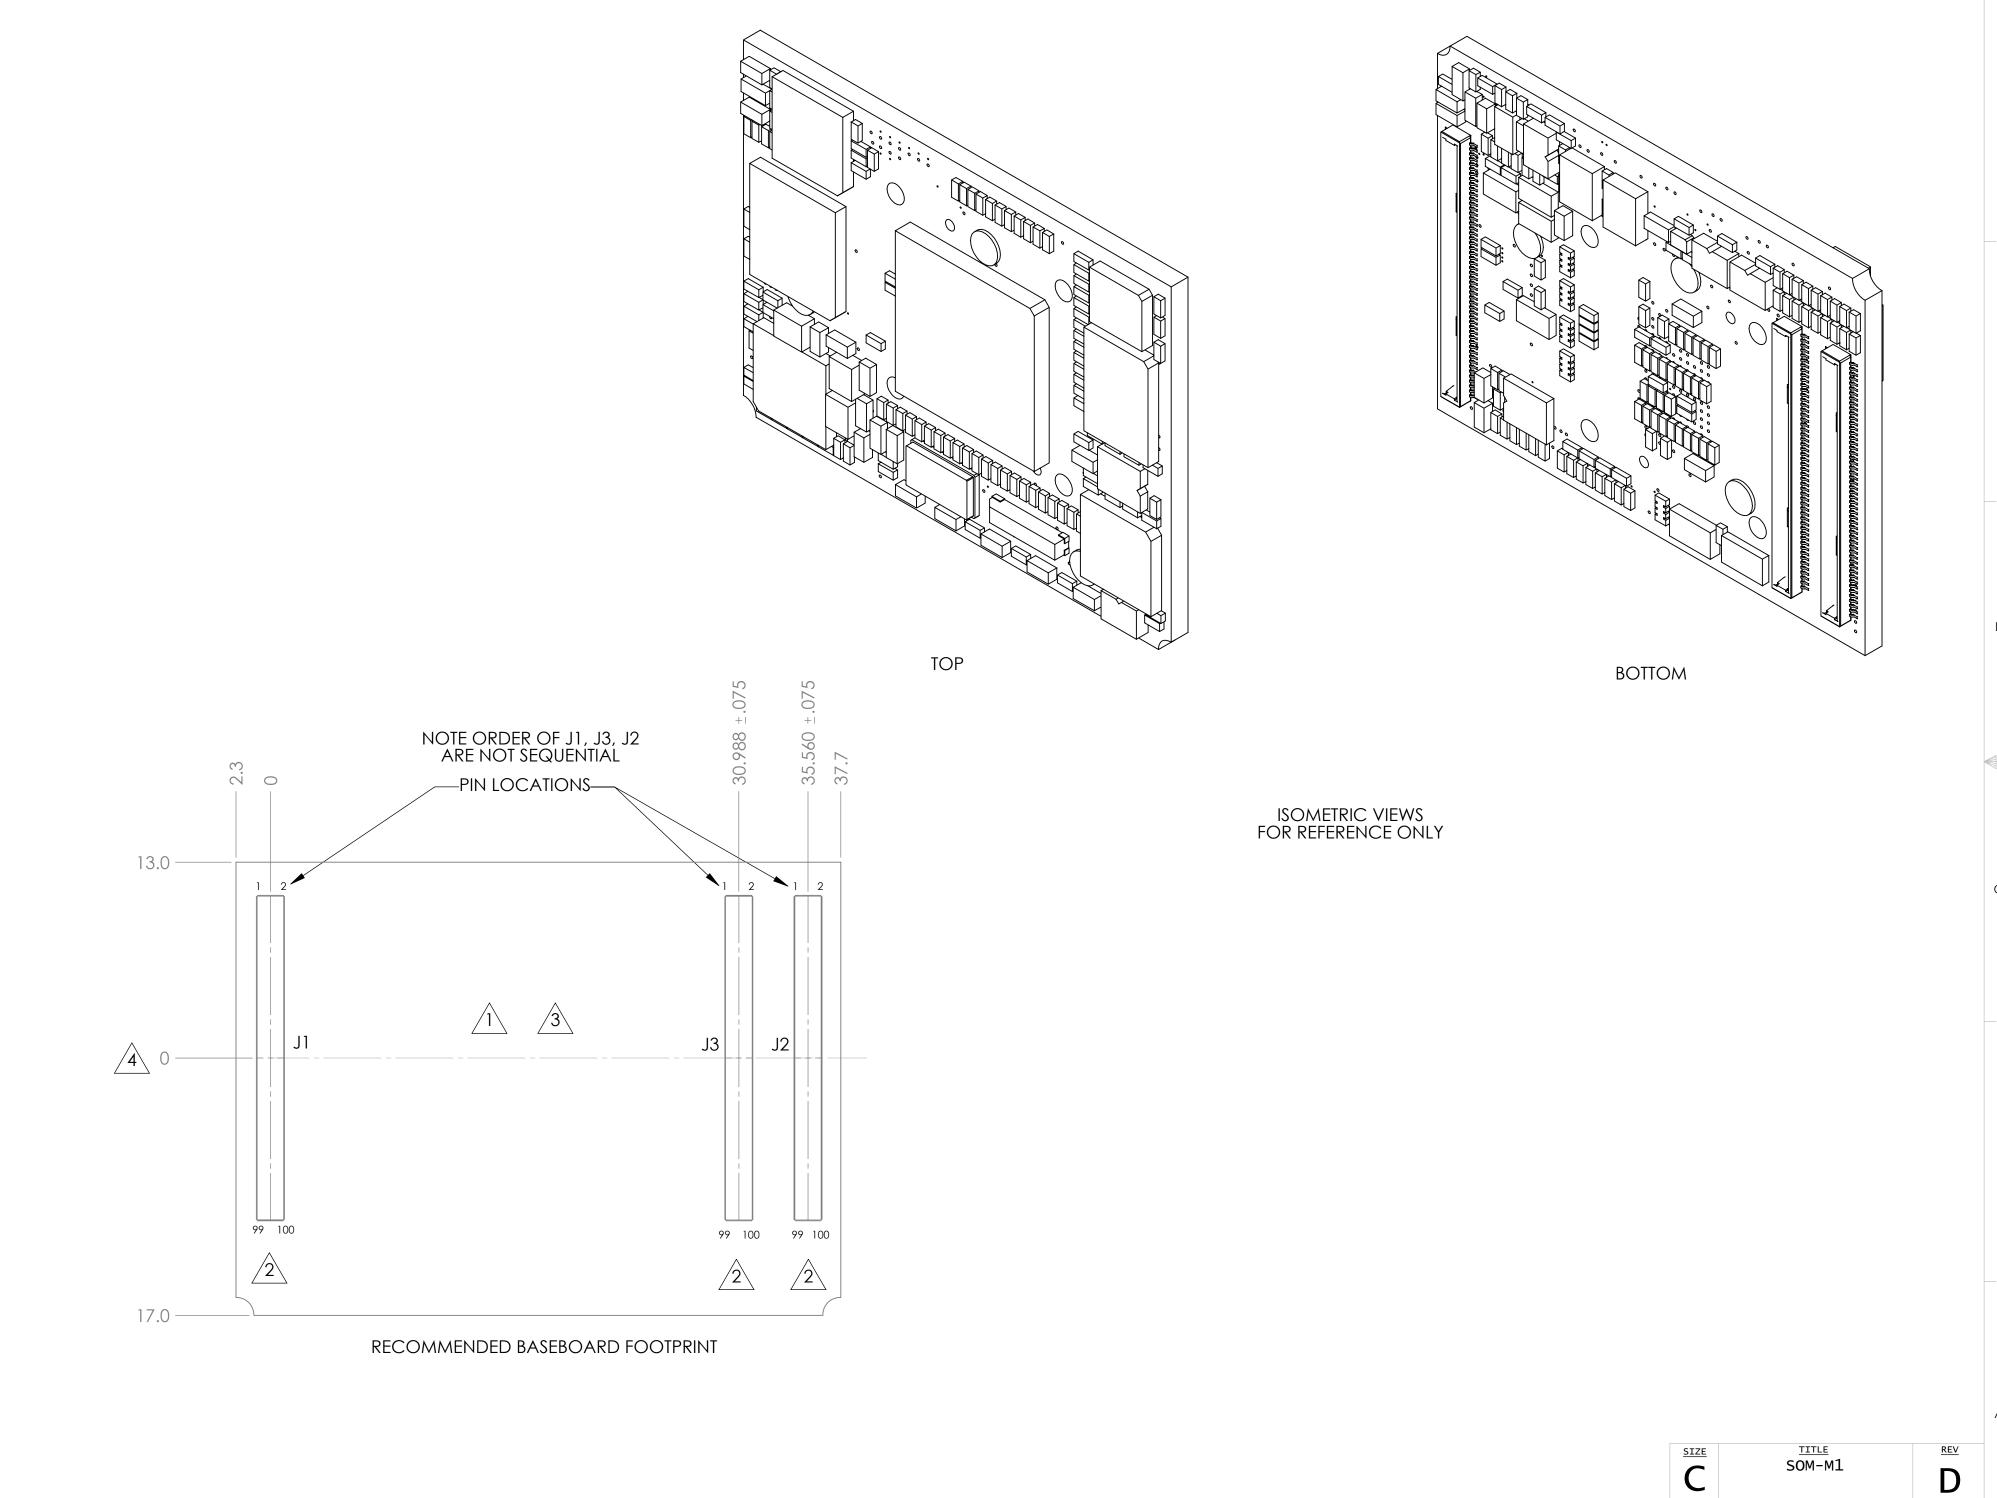


SHEET 2 OF 2

## **Appendix B: Example SOM-M1 Retention Methods**

			REVISIONS	
ls	REV.	ECO NUMBER	DESCRIPTION	DATE
	Α	-	INITIAL RELEASE	10.28.09
	В	C029865	UPDATED SOM DESCRIPTION	08.17.10

#### **NOTES:**

1. BASED ON TESTING A LIMITED NUMBER OF SAMPLES, THE SOM-M1 REQUIRES 10 LBS OF EXTRACTION FORCE AFTER ONE INSERTION CYCLE. AFTER 30 INSERTION AND EXTRACTION CYCLES, THIS IS REDUCED TO 7 LBS.

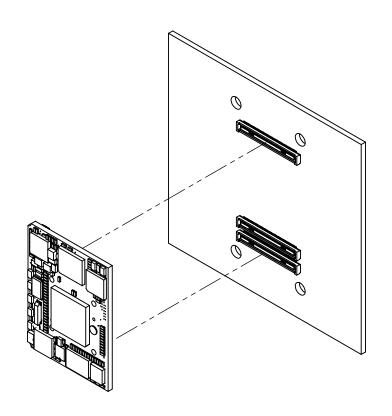

THIS DRAWING PREPARED IN ACCORDANCE WITH ASME Y14.5-2000

ALL DIMENSIONS ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED

TOLERANCES UNLESS OTHERWISE SPECIFIED

THIRD ANGLE PROJECTION

ENG	DATE
NWR	10.28.09
CHECK	DATE
KAG	10.28.09
MGR	DATE
PMH	10.28.09
MANE	DATE



411 N. Washington Ave. Suite 400 Minneapolis, MN 55401 T: 612.672.9495 F: 612.672.9489 I: www.logicpd.com

SIZE	TITLE	REV
Α	SOM-M1 Retention System- None	В
SCALE	<u>DWG_NO</u>	SHEET
1:1	1014513	1 OF 1


	REVISIONS REVISIONS					
REV.	ECO NUMBER	DESCRIPTION	DATE			
Α	-	INITIAL RELEASE	10.28.09			
В	C029865	UPDATED SOM DESCRIPTION	08.17.10			

# NOTES:

1. THE SOM-M1 CAN BE RETAINED IN PLACE BY THE SURROUNDING ENCLOSURE.



# REPRESENTATIVE ENCLOSURE

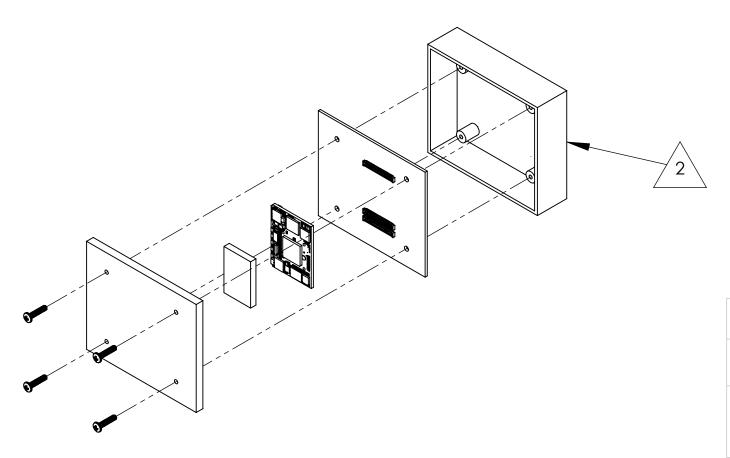

THIS DRAWING PREPARED IN ACCORDANCE WITH ASME Y14.5-2000

ALL DIMENSIONS ARE IN MILLIMETERS UNLESS OTHERWISE SPECIFIED

TOLERANCES UNLESS
OTHERWISE SPECIFIED
X ± 0.5

X.X ± 0.2 X.XX ± 0.1 X° ± 1°

THIRD ANGLE PROJECTION

ENG	DATE
NWR	10.28.09
CHECK	DATE
KAG	10.28.09
MGR	DATE
PMH	10.28.09
MANF	DATE

<b>&gt;</b>		
LO	GI	C
LO		•

411 N. Washingto	n Ave. Suite 400	Minneapolis, MN	55401
T:612.672.9495	F: 612.672.9489	1: www.logicpo	d.com

SIZE	TITLE	REV
Α	SOM-M1 Retention S Housing	Bystem -
SCALE	DWG NO	SHEET
1:2	1014515	1 OF 1

ITEM NO.										
	DESCRIPTION	VENDOR	PART NUMBER	QTY.	REV.	ECO NUMBER C029865		EVISIONS  DESCRIPTION  INITIAL RELEASE		DATE 08.16.10
1		NI/A	N1/A	1	В	C036458	DESCRIPTION MODIFICATHICK. WAS: THERM	TION TO ITEM NO. 4. IS: THE AL PAD, .009" THICK, ADHES	ERMAL PAD, .009" SIVE BACKED	05.10.13
l I	REPRESENTATIVE PCB STANDOFF, SURFACE MOUNT, M2,	N/A	N/A	I						
2	4MM LENGTH	PEM	SMTSO-M2-4	4						
3	SOM-M1	LOGIC PD	DEPENDENT ON SOM-M1 CONFIGURATION	1						
4	THERMAL PAD, .009" THICK	LOGIC PD	LPD-SOM-CLIP1-THPAD	2						
5	CLIP, RETENTION PLATE	LOGIC PD	LPD-SOM-CLIP1	2						
6	SCREW, PAN HEAD, M2 X 4MM	MCMASTER-CARR	92000A011	4				0		
RETEN	THE RECOMMENDED RETENTION MET		OGIC PD			(D)				
2. THER	MAL PAD IS DIE CUT TO FIT RETENTION	CLIP.								
<u>3</u> . DO	NOT PLACE COMPONENTS WITHIN LA	AYOUT AREA OF SOM	AND CLIP.							
A. BAS	SEBOARD CONNECTOR SPECIFICATIO COSE DF40C-100DS-0.4V	N:		<u></u>						
						.		<u> </u>		
5. DO I	NOT SCALE DRAWING.			9						
5. DO I	NOT SCALE DRAWING.									
5. DO I	NOT SCALE DRAWING.									
5. DO I	NOT SCALE DRAWING.						2	1		
5. DO I	NOT SCALE DRAWING.						2	1		RAWING PREPARE
5. DO I	NOT SCALE DRAWING.							1	IN ACC ASME	RAWING PREPARE CORDANCE WITH E Y14.5-2000 DIMENSIONS
5. DOI	NOT SCALE DRAWING.					4		1	IN ACC ASME ALL ARE IN UNLES	CORDANCE WITH Y14.5-2000
5. DO I	NOT SCALE DRAWING.				5	4		1	IN ACC ASME ALL ARE II UNLES S TOLER OTHERW	CORDANCE WITH Y14.5-2000 DIMENSIONS N MILLIMETERS SS OTHERWISE SPECIFIED RANCES UNLESS VISE SPECIFIED ± 0.5
5. DO I	NOT SCALE DRAWING.			6	5	4		1	IN ACC ASME ALL ARE IN UNLES S TOLER OTHERW X X.X	CORDANCE WITH Y14.5-2000 DIMENSIONS N MILLIMETERS SS OTHERWISE SPECIFIED RANCES UNLESS VISE SPECIFIEL
5. DO I	NOT SCALE DRAWING.			6		4		1	IN ACC ASME ALL ARE II UNLES S TOLER OTHERW X X.X X.X	CORDANCE WITH Y14.5-2000  DIMENSIONS N MILLIMETERS SS OTHERWISE SPECIFIED RANCES UNLESS VISE SPECIFIED ± 0.5 X ± 0.2 XX ± 0.1
5. DOI	NOT SCALE DRAWING.			ENG DATE NWR 08.16.1		4			IN ACC ASME ALL ARE IN UNLES TOLER OTHERW X X.X X.X	CORDANCE WITH E Y14.5-2000 DIMENSIONS N MILLIMETERS SS OTHERWISE SPECIFIED RANCES UNLESS VISE SPECIFIED ± 0.5 X ± 0.2 XX ± 0.1 ± 1°  IRD ANGLE PROJECTION  REV
5. DO I	NOT SCALE DRAWING.					GIC 4		SON	IN ACC ASME ALL ARE IN UNLES TOLER OTHERW X X.X X.X	CORDANCE WITH E Y14.5-2000  DIMENSIONS N MILLIMETERS SS OTHERWISE SPECIFIED RANCES UNLESS VISE SPECIFIED ± 0.5 X ± 0.2 XX ± 0.1 ± 1°

